

# FUNCTION

Single Point Switch for on-off control of bulk solids. On-off switch presence/absence, indication of objects.

### TYPICAL USES

HighLevel Alarm or Control Plugged Chute Detection Conveyor Control Flow/No Flow Detection Web Break Detection Truck and R.R. Position LowLevel Alarm or Control

# PRIMARY AREAS OF APPLICATION

Where material to be sensed constantly changes physical properties, eg: Municipal Solid Waste. Reliable sensing does not depend on any specific physical or electrical characteristics of the material.

### Low bulk density materials

Eg: Textile fibers, onion skins, popcorn, styrofoam pellets, puffed cereals. This sensing technique permits sensing products which are so light that they cannot be reliably sensed by other means. Reliably senses products with bulk densities of less than 1/4 lb./cubic foot.

# Stringy, fibrous materials

Eg: Yarn, chipped fibers, waste paper, trash. Sensor is mounted flush with bin wall to prevent material build-up at sensing point. No moving parts to catch fibers.

# Delicate materials

Eg: Puffed cereals, potato chips. Nothing projects into falling product to crush it, no motion of sensor to fracture fragile products.

### Abrasive materials

Eg: Crushed coal, sand, ore. Rugged construction. No moving parts. Hermetically sealed sensors do not protrude into flow stream.

### Hot materials

Series 14 sensors are designed for continuous operation at 400°F (+205°C).

# Small hoppers

Nothing protrudes into hopper to obstruct flow.

### **FEATURES**

### · Vibration resistant

The rugged magnetostrictive sensors are designed to tolerate sustained shock and vibration. The control unit is designed for remote mounting away from the vibrating equipment.

# · Independent time delays

Delay on make or delay on break contact adjustments are non-interacting and independent.

# Corrosion resistant, watertight enclosure Glass-reinforced polyester enclosure features captive hardware and stainless steel trim to endure the most corrosive environments.

# Versatile power supply The standard units accepts 115 Volts AC, 230 Volts AC or low voltage 24 DC input power.

### · Self-Test

The Sonac 220 is equipped with a self test circuit. Pressing the momentary switch located on the far right of the board will activate it. An optional external switch is also available.



### ■PRINCIPLE OF OPERATION


A pair of matched sensors is connected to an amplifier as a receiver (microphone) and a transmitter (loudspeaker). When the amplifier gain is increased to the point where its gain exceeds the loss in the acoustic path between the sensors, oscillation (feedback) occurs. An object entering the acoustic path increases the loss and the oscillation decreases.

In the Sonac® system, one sensor is connected to the Sonac® amplifier and operates essentially as a loudspeaker. This transmitting sensor will produce ultrasonic sound waves of the frequency dictated by the sensors themselves. The other sensor which we will call the receiving sensor is connected to the amplifier as a microphone and will deliver to the amplifier electrical energy from ultrasonic sounds reaching its diaphragm. The amplifier itself is capable of amplifying the weak sounds received by the receiving sensor more than 1,000,000 times.

The Sonac" sensors are, by design, guite directional in their response to sound waves. If the transmitting and receiving sensors are positioned facing each other and the path between the two sensors is unobstructed and the electrical gain in the amplifier is sufficient to overcome the losses in sound energy across the path between the two sensors, acoustic feedback will occur. This, of course, cannot be heard, as Sonace is designed to operate near 38,000 Hz. This is well above the range of human hearing.

When the acoustic characteristics of the air path are changed by variations in temperature, relative humidity, or standing wave conditions, then the Sonace system merely adjusts itself to some new frequency which is optimum for the present path conditions. In every case the actual frequency of the acoustic feedback in the Sonac" path is whatever frequency will produce the least loss across the path. In actual operation, this change in frequency is limited by the electrical characteristics of the amplifier and the acoustic properties of the sensors.

# Ultrasonic Transmitte Receive Rec. Relay

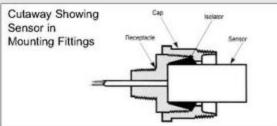

### SPECIFICATIONS

Input Voltage NOMINAL ABSOLUTE LIMITS 115 Volts AC 95-135 Volts AC 230 Volts AC 180-270 Volts AC

24 Volts DC 21-28 Volts 4VA volt amperes

Frequency, AC Power 50-60 Hz

Power

Time Delay Independent with Auto Reset

on make, on break

Delay Time Range 50 milliseconds min.

10 seconds nominal 30 seconds max.

Fail-Safe Switch selectable - High Level or Low Level

High Level Fail-safe Position:

Relay is de-energized when material

is present

Low Level Fall-safe Position:

Relay is de-energized when material

is not present

Two, light emitting diodes (LED) Indicators

YELLOW - illuminated when relay is energized

RED - illuminated when material

is present at sensor

-40°F to +160°F (-40°C to +71°C) Operating Temperature

Relay, 2 Form C contacts DPDT Output

Ratings 5 amp @ 120 Volts AC Non-inductive

3 amp @ 240 Volts AC Non-inductive

3 amp @ 24 Volts DC Non-inductive


PVC - 50 feet (15.24M) Maximum Cable Length

Teffon - 30 feet (9.14M)

Shipping Weight Control Unit - 5 pounds (2.25 kilograms)

Sensor - 1.5 pounds (0.68 kilograms)

Cable - 0.5 pounds (0.45 kilogram)

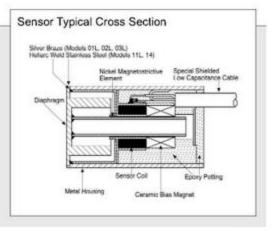

# Sensors Transmitters and Receivers Sensors are supplied as matched pairs

Model No. Transmitting Angle Description Corrosion Resistant Sensor Face - 316 Stainless Steel Minimum Distance - 2 inches\* 11L High Temperature Sensor Face - 316 Stainless Steel

50 ft. PVC cable standard. 10 ft. max. sound path. Temp. range from -65°F to +220°F (-54°C to +104°C)

Bin Level Control Food Products Corrosive Products

Typical Applications

Dry Level Control

Webb Break

Maximum Distance - 12 feet\* \*depending on process material

Keep at least 18 inches (457.2 mm) between adjacent sensors.


Sensor temperature range -65°F to +400°F (-54°C to +205°C).

15 ft. Teflon cables are standard. For high temperature applications use Part #31308-3 fitting.

Minimum Distance - 2 inches\* Maximum Distance - 12 feet\* \*depending on process material

Keep at least 18 inches (457.2 mm) between adjacent sensors




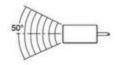


14

### Bin-Wall Fittings

P/N	Temperature Limit	Material	Mounting Thread	Conduit Thread	Description  General Purpose  High Temperature		
Standard	220°F (+140°C)	Glass Filled Nylon®	2" NPTM	3/4 NPTM			
High-Temp.	400°F (+205°C)	Ryton®	2" NPTM	3/4 NPTM			
Food-Grade	220°F (+140°C)	316 Stainless Steel		3/4 NPTM	Food-Grade		

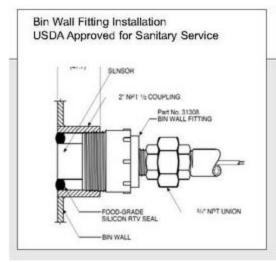

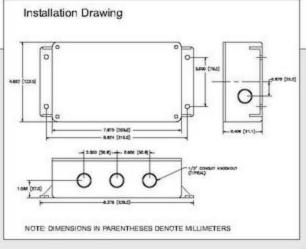



### TIME DELAY SETTINGS

### Bin Level Control

Normally requires both time delays to insure that a turbulence upper level will not cause a false trip. Clockwise rotation of Beam Make and Beam Break increases time delay.

### Plugged Chute Control

Applications will normally have a delay on Beam Break so that falling material will not trip the control relay prematurely.

### Starvation Control

Applications require delay on Beam Make so that when product ceases to flow (starvation) the relay will not operate until some reasonable time period has elapsed. This prevents false signals due to temporary reduction in flow.

# Object Detection Control

Such as vehicle washing equipment, require about 1/2 second delay on Beam Make and Beam Break to prevent false signals.

### General Comments

Always use as much time delay as the application will permit. These time delay adjustments permit custom application of the SONAC®/220 system to your specific process needs.

# SENSORS


SONAC\* sensors are ruggedly constructed and hermetically sealed for dependable service and unlimited life under the most adverse operating conditions. SONAC\* magnetostrictive transducers are provided in matched pairs. Thus, one acting as a transmitter operates efficiently only with its matched receiver. The matched sensors are identical in construction and act as either transmitter or receiver according to the way they are wired to the control unit.

### **■CUSTOMER CONNECTIONS**

SONAC/220						SENSOR TRANS							SENSOR REC						
GND.	NEUT	115 VAC	230VAC	NC	C	ON	NC	0	ON.	¥Ç¥	ΠE	ELD	ARE	ARE.	+		GTB	шЕ	X
				RELAY CONTACTS					8	N	SH	SP	SP	NOCH		SH	N.	38	
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20

### ■ORDERING INFORMATION

### SONAC®

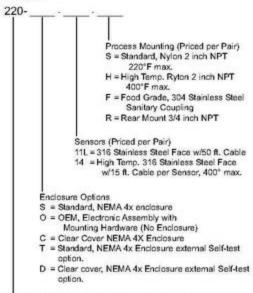

Model Sonace 220 Ultrasonic Bulk Level Switch



NOTE: If multiple systems are used in the same vessel, please specify "Frequency Separation."

CSA Approved for Class II, Groups E, F, G; Divisions 1 Hazardous Locations

Recycling Equipment Corporation 831 West 5th Street Lansdale, PA 19446 Phone 267-218-7200 Extension 35 Fax 267-218-7215

**Buy Online at** 

www.RecyclingEquipment.com